

- 1 - Terminal D1 (+) and D2 (-) for connecting Power supply [24VDC]
- 2 - Terminal S1 and S2 for connecting handheld programmer when setting parameters,
- 3 - Terminal HJ1 and HJ2 for connecting Fire signal relay output [Normally Open]
- 4 - Terminal GZ1 and GZ2 for connecting Fault signal relay output [Normally Close]

Connect Beam Detector With IQ515

